PYLE®

disco jam

600 Watt Battery Powered Portable Bluetooth Battery Powered PA Speaker System
w/ USB/SD, FM Radio, 3.5mm AUX Input, One Wireless Microphone and Disco Lights

www.pyleaudio.com

Operating Instructions

PWMA1594UFM

Specifications

PWMA1594UFM

*10" Woofer and 3" Tweeter
*Fully Featured 3 Channel Mixer
*Heavy Duty Handles And Wheels For Easy Portability
*Bluetooth Music Streaming Function To Play Music From any Smart Phone
*USB/SD Flash And Card Reader Function With FM Radio
*USB Provides 5v 1A Charge For Smart Phones And Other Devices
*Display Screen Shows Number Of Songs, Play Time And Fm Radio Frequency
*One VHF Wireless Microphone
*Built In Rechargeable Battery
*DC 12V Input For Use With Car, RV, or Boat
*Two 1/4" Microphone Inputs
*One 1/4" Lo-Z Guitar Input With Volume Control
*One 1/4" Drum Input For Other Instruments
*3.5mm AUX Input With Cable (Compatible with iPhones/Smartphones, MP3 Players & Devices with Headphone Outputs)
*Flashing Disco Light With On/Off Switch
*Ported Enclosure For Added Bass Response
*600 Watts Peak Power/300 Watts, RMS @ 4 Ohm
*Woofer Magnet Weight: 25 oz.
*Frequency Response: 20Hz-20Khz
*35mm Speaker Stand Mount
*AC 110V/220V Power Switch
*Dimensions: 27"H x 15.2"W x 17"D
*Weight: 26.9 lbs

Safety Notes

1. Correct power must be used to operate this unit properly, do not use any other powering options, cords or methods.

2. Carfully handle, plug and unplug the power cable when handling. Hold the plug with a firm grip and when plugging or unplugging from sockets.

3. Do not open chassis! Extermely dangerous! Do not put your hands inside the chassis. If the device begins to malfunction do not attempt to repair, unplug the unit and contact Pyle immediately.

4. Don't use volatile or dangerous chemical cleaners on the unit (like toluene, alcohol, gasoline etc.) Use gentle cleaners.

5. Keep the unit in a well ventilated environment and keep away from, direct sunlight to prevent unit from overheating.

6. Avoid the unit from moisture or rain.

Operating Controls - System Layout

①	Volume Control	⑫	USB/SD Jack	㉓	10+
②	Treble Control	⑬	Full	㉔	DC 12V Input
③	Bass Control	⑭	Line-Out/Aux Audio Output	㉕	Disco Lights
④	Mic Volume Control	⑮	Charging	㉖	Tweeter
⑤	Echo Control	⑯	Vice-Box Power OUTput	㉗	Woofer Speaker
⑥	Mic Input Jack	⑰	Fm Antenna	㉘	Vent Hole
⑦	Line-In/Aux Audio Input	⑱	AC Power Supply	㉙	The Rubber Feet
⑧	Mode Control	⑲	Power Switch	㉚	Metal Corner
⑨	Next Control	⑳	Voltage Selector Switch	㉛	Speaker Handle
⑩	Play/Pause Control	㉑	Lights Switch		
⑪	Prev Control	㉒	Repeat		

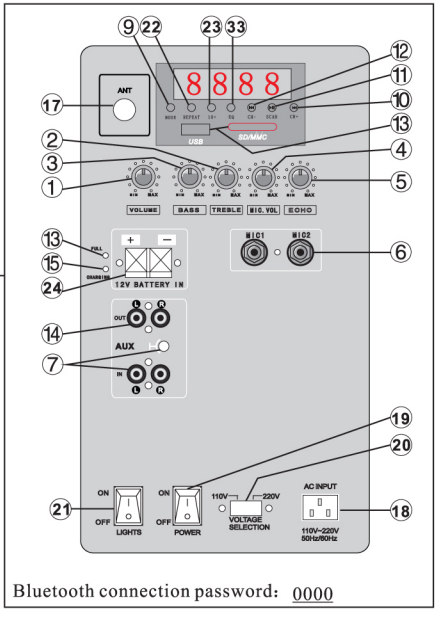

Bluetooth connection password: 0000

Rear Panel Schematic

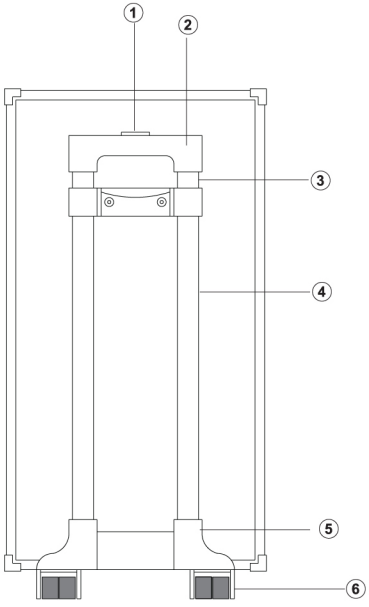

① Trailer Handle
② Trailer Handle
③ Fm Radio Telescopic Antenna
④ Fixed Stand For The Traile
⑤ Truckle of Trailer

Remote Control Diagram

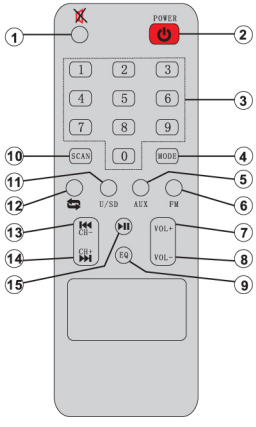

① Mute switch
② Power
③ 0-9
④ Mode Control
⑤ AUX
⑥ FM
⑦ VOL+
⑧ VOL−
⑨ EQ
⑩ Fm Scan
⑪ USB/SD Selector
⑫ Repeat
⑬ Prev Control
⑭ Next Control
⑮ Play/Pause Control

www.pyleaudio.com

tel: 718.535.1800 fax: 718.236.2400

1600 - 63rd StreetBrooklyn, NY,11204